


Spot Cooler

Pure Drive

PD-7100S

Product Safety Guide

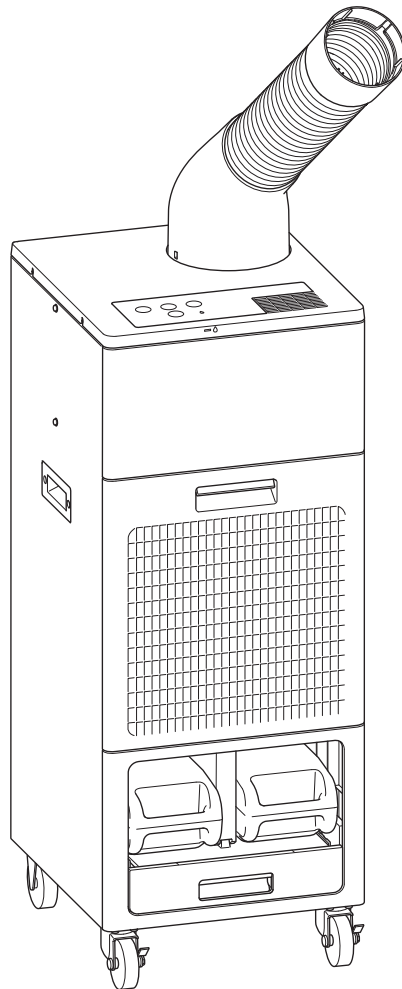










Thank you for purchasing this product.





Read this guide before attempting to operate the product, or before attempting any maintenance, and ensure that you follow all warnings and instructions marked on the product.

How to Read this Guide

If you have concerns about how to use your product safely after reading this guide, contact Brother customer service or your local Brother dealer. Failure to follow these instructions may result in an increased risk of personal injury or damage to property, including through fire, electric shock, burns, or suffocation. Brother shall not be liable for damage caused where the product owner has failed to follow the instructions set out in this guide. The following symbols and conventions are used throughout this document.

 WARNING	WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injuries.
 CAUTION	CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries.
IMPORTANT	IMPORTANT indicates a potentially hazardous situation which, if not avoided, may result in damage to property or loss of product functionality.
NOTE	NOTE specifies the operating environment, conditions for installation, or special conditions of use.












	Fire Hazard icons alert you to the possibility of a fire.
	Electrical Hazard icons alert you to possible electrical shocks.
	Prohibition icons indicate actions that must not be performed.
	This icon indicates that the product may ignite due to an external fire.
	This icon indicates that touching certain parts of the product may cause an injury.
	This icon indicates that disassembling the product may cause an injury, such as an electric shock.
	This icon indicates that handling the product with wet hands may result in an electric shock.

	This icon indicates that getting the product wet may result in an electric shock.
	This icon indicates that you "must do" the indicated action.
	This icon indicates that you should unplug the power plug from the electrical socket.
	This icon indicates that you should connect the earth.



Use the Product Safely

Wiring power supplies and devices

WARNING






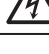 



	If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
	Always connect the earth before use. Also, use an electrical socket equipped with an earth leakage breaker. Incomplete earthing may result in an electric shock.
  	Use the AC 220 to 240 V power supply. DO NOT use with a DC power supply or inverter (DC-AC conversion device). This may cause a fire or electric shock. If you are not sure whether the electrical socket for connecting this product is an AC or DC power supply, consult a qualified electrician.
	Make sure you insert the power plug firmly into the electrical socket. If the plug is not inserted securely, water, dust, or other foreign matter may get into the gap, causing a fire or electric shock.
	Periodically unplug the power cord and power plug from the electrical socket and check them for damage, such as heat generation, rust, bends, abrasions, or cracks. Continuing to use a damaged cord may cause a fire or electric shock.
 	DO NOT forcibly bend, pull, or alter the power cord, or use the power cord while it is bundled. Damage to the power cord may cause a fire.
	Do not move this product by dragging it by the power cord or run over the power cord with casters. Damage to the power cord may cause a fire.
   	Unplug the power plug if the product is not to be used for an extended period of time. This may result in an electric shock or a fire by electrical leakage due to a deterioration of the insulation. Also, DO NOT plug or unplug the power plug with wet hands. This may result in an electric shock.
	When cleaning this product, always unplug the power plug from the electrical socket. There is a risk of a fire or electric shock. When unplugging the power plug, hold the plug itself and DO NOT pull the cord.

CAUTION

	To completely cut off the power to this product, you must unplug the power plug from the electrical socket. Install this product near an electrical socket so that you can quickly unplug it in an emergency situation.
	DO NOT place any objects around the power plug so that you can unplug the power plug at any time. The power plug may become difficult to unplug in an emergency.








DO NOT use in the following ways:

WARNING

  	DO NOT use in places subject to rain or water. This may cause an electric shock or fire due to a water leakage.
	DO NOT use near open flames or in places where sparks may be emitted. This may cause a unit deformation or fire.
  	DO NOT use for air conditioning on ships or vehicles. This may cause an electric shock or fire due to a water leakage or earth leakage.
	DO NOT use in places where conductive dust, such as carbon or metal, is generated. This may cause a fire or electric shock due to a short circuit.
  	DO NOT use outside the guaranteed operating temperature range. This may cause a fire or malfunction. The guaranteed operating environment range is as follows. Temperature: 5 to 45°C











If this happens

WARNING

   	<p>If there are any abnormal sounds, smoking, heating, or unusual odours, immediately unplug the power plug from the electrical socket, and contact Brother customer service or your local Brother dealer. Continuing to use the product in this condition may cause a fire or electric shock. Also, never attempt to repair the product yourself as this is dangerous.</p>
	<p>If the product falls over or is damaged, immediately unplug the power plug from the electrical socket, and consult the dealer where you purchased it or Brother customer service. Continuing to use the product in this condition may cause a fire or electric shock.</p>
  	<p>If you allow electrical parts inside the product to come in contact with electrically conductive foreign objects, such as those listed below, it may result in a fire or electric shock. If a foreign object gets inside the product, immediately unplug the power plug from the electrical socket, and consult the dealer where you purchased it or Brother customer service.</p> <ul style="list-style-type: none"> • Metal objects, such as paperclips and staples • Precious metals, such as necklaces and rings • Liquids, such as water, chemicals, and pet urine

Other precautions




WARNING

  	<p>DO NOT disassemble or modify the product. This may result in a fire or electric shock.</p>
  	<p>Keep away from open flames. There is a risk of a fire or electric shock.</p>
 	<p>DO NOT block the air intake, spot port, or exhaust port with paper or cloth. This may result in a malfunction or fire.</p>
 	<p>DO NOT remove the filter cover while the product is operating. You may be injured if you touch the rotating parts.</p>





- To prevent possible injuries, at least two people should lift the product.
- Do not remove any safety signs, stickers or labels from the device. Keep all safety signs, stickers and labels in legible condition.
- Packaging can be dangerous. Avoid leaving where it can be accessed by children.
- The device is not a toy and does not belong in the hands of children.

CAUTION

 	<p>Never insert fingers or sticks into the exhaust or spot ports. You may be injured if you touch the rotating parts.</p>
	<ul style="list-style-type: none"> • DO NOT use the unit with the casters (with lock) unlocked. The unit may move unintentionally, posing a risk of injury to the operator. In particular, lock the casters when operating the panel, installing or removing the duct, removing the tank, and during maintenance. • DO NOT remove or damage any of the caution or warning labels inside the product.

Other precautions (continued)

IMPORTANT

	Use the unit in an area with sufficient ventilation. Using the unit in a small enclosed space increases the humidity, which not only prevents the unit from achieving its cooling capacity, but may also trigger rusting on nearby metal equipment due to moisture.
	Leave a sufficient space (50 cm or more) around the unit's air intake. Placing the air intake too close to a wall or other obstacle may result in insufficient airflow and reduced performance.
	Keep the unit horizontal. Installing the unit at an angle may cause water to leak.
	Use tap water. Using well water or industrial water may cause odours to develop.
	Always drain the remaining water every day at the end of operation. Leaving water in the water tank or sub-tank may cause odours due to a decay or microbial growth.
	When transporting or moving the unit, be sure to secure the water tank, cooling air duct, and other parts securely before moving it.
	Depending on the type of dust or mist in the environment, the product may be damaged, leading to malfunctions or reduced performance.
	When transporting or moving this product, run the drying operation and then drain the water from the water tank and sub tank before moving it. Submitting the unit to vibrations or tilting the unit may cause water to leak.
	DO NOT move the unit while it is operating. This may cause a water leakage or malfunctions.
	Do not subject the unit to sudden changes in the temperature environment. Sudden changes in temperature may cause condensation to form inside the unit, which may cause damage.
	The cooling from the spot and exhaust ports is humid, so DO NOT place objects that are susceptible to rust in front of the unit.
	DO NOT use the unit in an environment where oil particles are suspended in the air. The circulating water may become contaminated with oil and become unusable. Install the unit in a location where clean outside air can enter.
	DO NOT put any objects on top of the product. Doing so may cause the product to malfunction.
	DO NOT remove the label with the serial number attached to the unit.
DO NOT rotate the swinging part using excessive force.	

Product Warranty & Liability

Nothing in this guide shall affect any existing product warranty or be construed as granting any additional product warranty. Failure to follow the safety instructions in this guide may invalidate your product's warranty.

WARNING



Only use the power cord supplied with this product (if included in the box).

Disconnect device



This product must be installed near an electrical socket that is easily accessible. In case of an emergency, you must unplug the power plug from the electrical socket to shut off the power completely.

WARNING

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Brother Customer Service

Customer Service

Visit <https://www.brother.com.ph/en> for contact information for your local Brother office.

Service Centre Locations

For service centres in your country, contact your local Brother office. Address and telephone contact information for local offices can be found at <https://www.brother.com.ph/en>.

Disclaimer

Failure to follow these instructions may result in an increased risk of personal injury or damage to personal property, including through fire, electrical shock, burns, or suffocation.

Brother disclaims any warranties with respect to avoidance, mitigation or non-occurrence of any breakdowns, malfunctions, system crashes, hang-ups, virus infections, damage and disappearances of data, and any other kind of errors by using this product.

AS LONG AS PERMITTED BY APPLICABLE LAWS, BROTHER WILL NOT BE LIABLE FOR ANY LOST REVENUES OR INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY, OR PUNITIVE DAMAGES OF THE CUSTOMERS OR ANY OTHER THIRD PARTY.

FOR USERS IN COUNTRIES EXCEPT EUROPEAN COUNTRIES

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

FOR USERS IN EUROPEAN COUNTRIES

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

brother



D03ATJ001B